



AFV1000 Filter Replacement Instructions.

Equipment required to replace the filter :

Protective Gloves.

Filter Kit number : **AFV 1000 KIT**

12mm And or 14mm spanner

Container to collect any fuel spillage.

1. Ensure that the control valve is in the closed position.
2. Place a container under the filter bowl.
3. Loosen the filter bowl bolt (**0014**). Note - kit may be supplied with 12mm head bolt.
4. Hold the filter bowl (**0009**) in place and withdraw the bolt from the bottom of the bowl.
5. Carefully slide the filter bowl down and away from the valve body.
6. Slide the plastic filter element (**0016**) down the filter stem and discard.
7. Remove all 'O' rings and washers from the valve body groove, filter stem and filter bowl bolt. (**0018, 0019, 0020, 0015**).
8. Wipe the inside of the filter bowl to remove any sludge.
9. Fit the new large 'O' gasket (**0018**) into the valve body groove.
10. Slide the new plastic filter element up the filter tube (flat side uppermost) and fully locate by carefully twisting whilst pushing upwards.
11. Fit the new metal washer (**0015**) to the filter bowl bolt (**0014**) followed by the new rubber washer (**0020**).
12. Insert the bolt through the filter bowl and fit the new small 'O' ring (**0019**) over the bolt threads on the inside of the filter bowl.
13. Engage the bolt into the thread of the filter stem and turn clockwise two or three turns.
14. Locate the filter bowl into the groove in the valve body making sure the bowl is seated evenly.
15. Holding the bowl in place, finally tighten the bolt (**do not overtighten**).